


NEW - Additional HFT Standard now included with HFT Speaker Kits

Place 1 standard HFT on ceiling, centered above speaker.

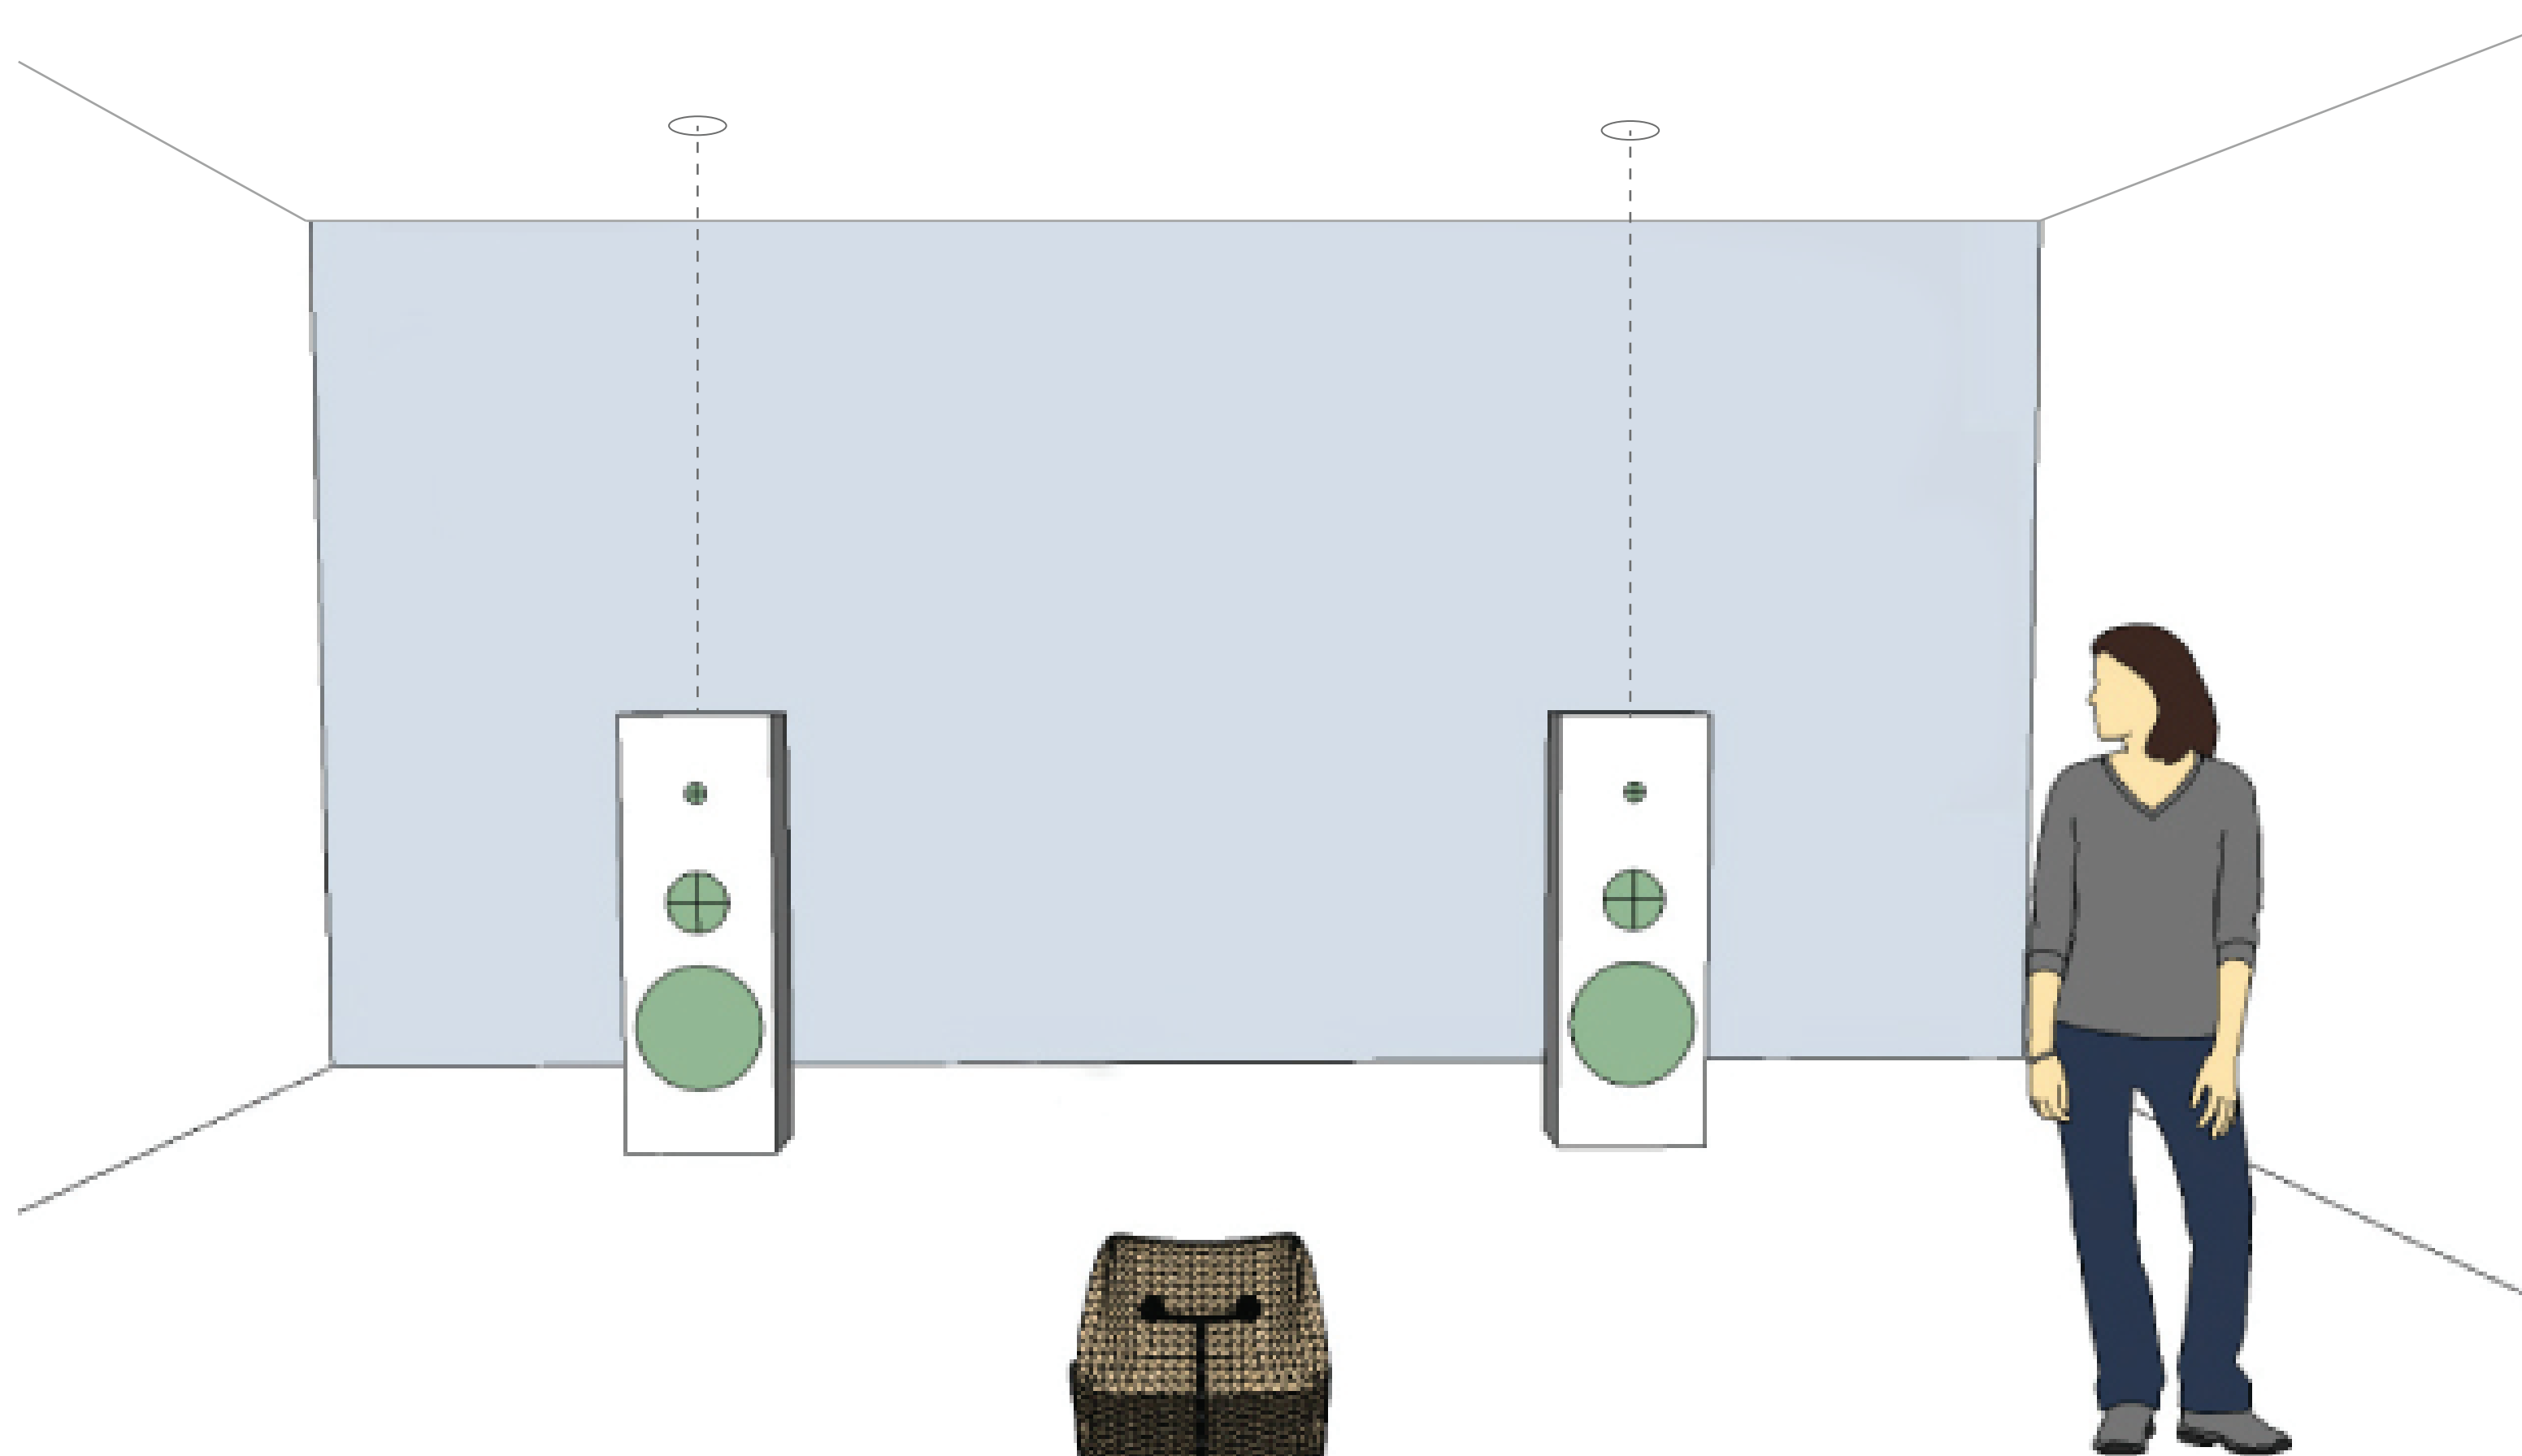

HFT SPEAKER PLACEMENT GUIDE

<p>Rear Port</p> <p>HFT, HFT 2.0 and HFT X Speaker Placement Rear Port - Front View</p>	<p>Rear Port</p> <p>HFT, HFT 2.0 and HFT X Speaker Placement Rear Port - Rear View</p>
<p>Front Port</p> <p>HFT, HFT 2.0 and HFT X Speaker Placement Front Ported 3-Way</p>	<p>Front Port</p> <p>HFT, HFT 2.0 and HFT X Speaker Placement Front Port - Rear View</p>
<p>No Port</p> <p>HFT, HFT 2.0 and HFT X Speaker Placement Rear Port - Front View</p>	<p>No Port</p> <p>HFT, HFT 2.0 and HFT X Speaker Placement No Port - Rear View</p>
<p>Monitor Front Port</p> <p>HFT, HFT 2.0 and HFT X Monitor Speaker Front Port - Front View</p>	<p>Monitor Front Port</p> <p>HFT, HFT 2.0 and HFT X Monitor Speaker Front Port - Rear View</p>
<p>Monitor Rear Port</p> <p>HFT, HFT 2.0 and HFT X Monitor Speaker Rear Port - Front View</p>	<p>Monitor Rear Port</p> <p>HFT, HFT 2.0 and HFT X Monitor Speaker Rear Port - Rear View</p>
<p>Monitor No Port</p> <p>HFT, HFT 2.0 and HFT X Monitor Speaker No Port - Front View</p>	<p>Monitor No Port</p> <p>HFT, HFT 2.0 and HFT X Monitor Speaker No Port - Rear View</p>
<p>Electrostatic</p> <p>HFT, HFT 2.0 and HFT X Electrostatic Hybrid Front view</p>	<p>Electrostatic</p> <p>HFT, HFT 2.0 and HFT X Electrostatic Hybrid Rear View</p>
<p>Planar</p> <p>HFT, HFT 2.0 and HFT X Planar Speakers Front View</p>	<p>Planar</p> <p>HFT, HFT 2.0 and HFT X Planar Speaker Rear View</p>
<p>Side Firing Woofer</p> <p>HFT, HFT 2.0 and HFT X Side Firing Woofer Front View</p>	<p>Side Firing Woofer</p> <p>HFT, HFT 2.0 and HFT X Side Firing Woofer Rear View</p>

